


MDMSGate.
Ethernet connection.
How start to work in Domoticz...

1. Install jumpers as shown in the picture.

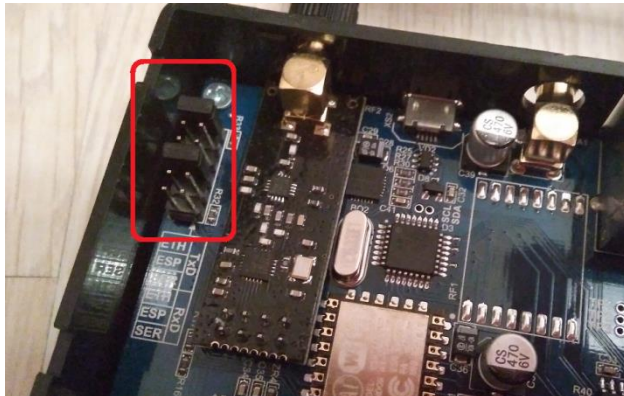


2. Connect the antenna to the gateway.



3. Plug in an Ethernet (one side) cable into the gateway and router (other side).




4. Plug in a power cable (as example microUSB power charger for mobile phone or direct to PC via microUSB cable) into the gateway.

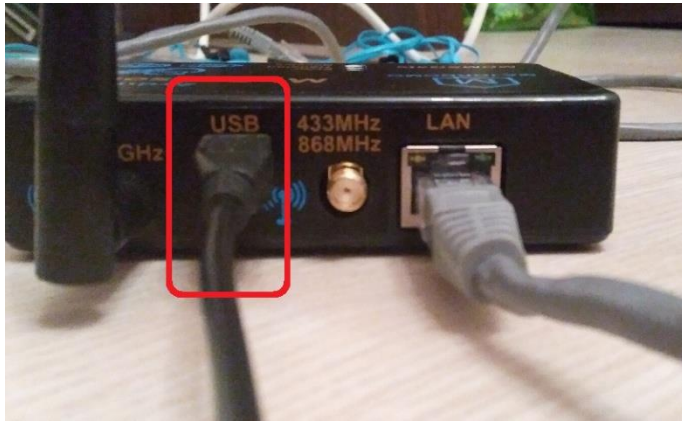

5. Switch power on gateway.
6. Now, router have to define IP address for gateway (via DHCP). You can find out this address using the utility “TCPIP Discoverer” -


https://drive.google.com/drive/folders/0B0CVwpCXgNo_a2JVYzdDZU1pMlk.


Just run this utility...

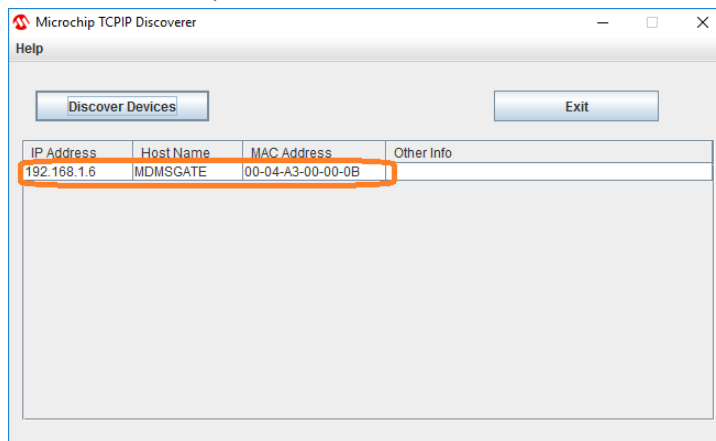

7. Install “Domoticz” software.
8. Run the “Domoticz” software.

9. Add gateway to hardware.

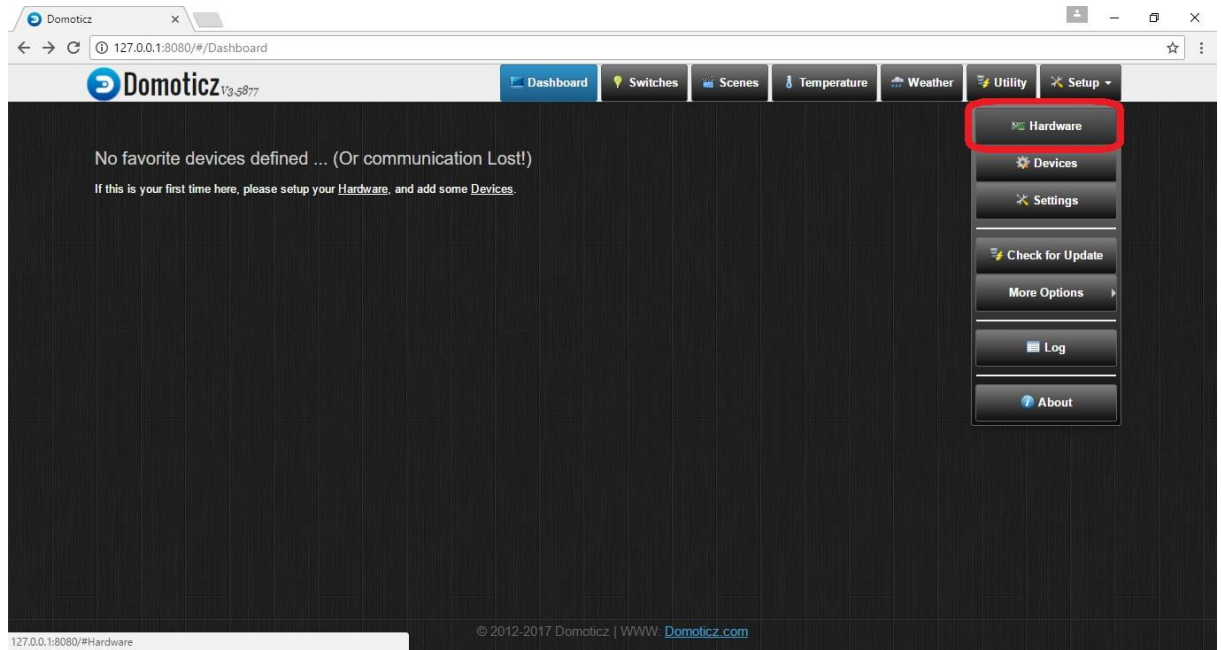

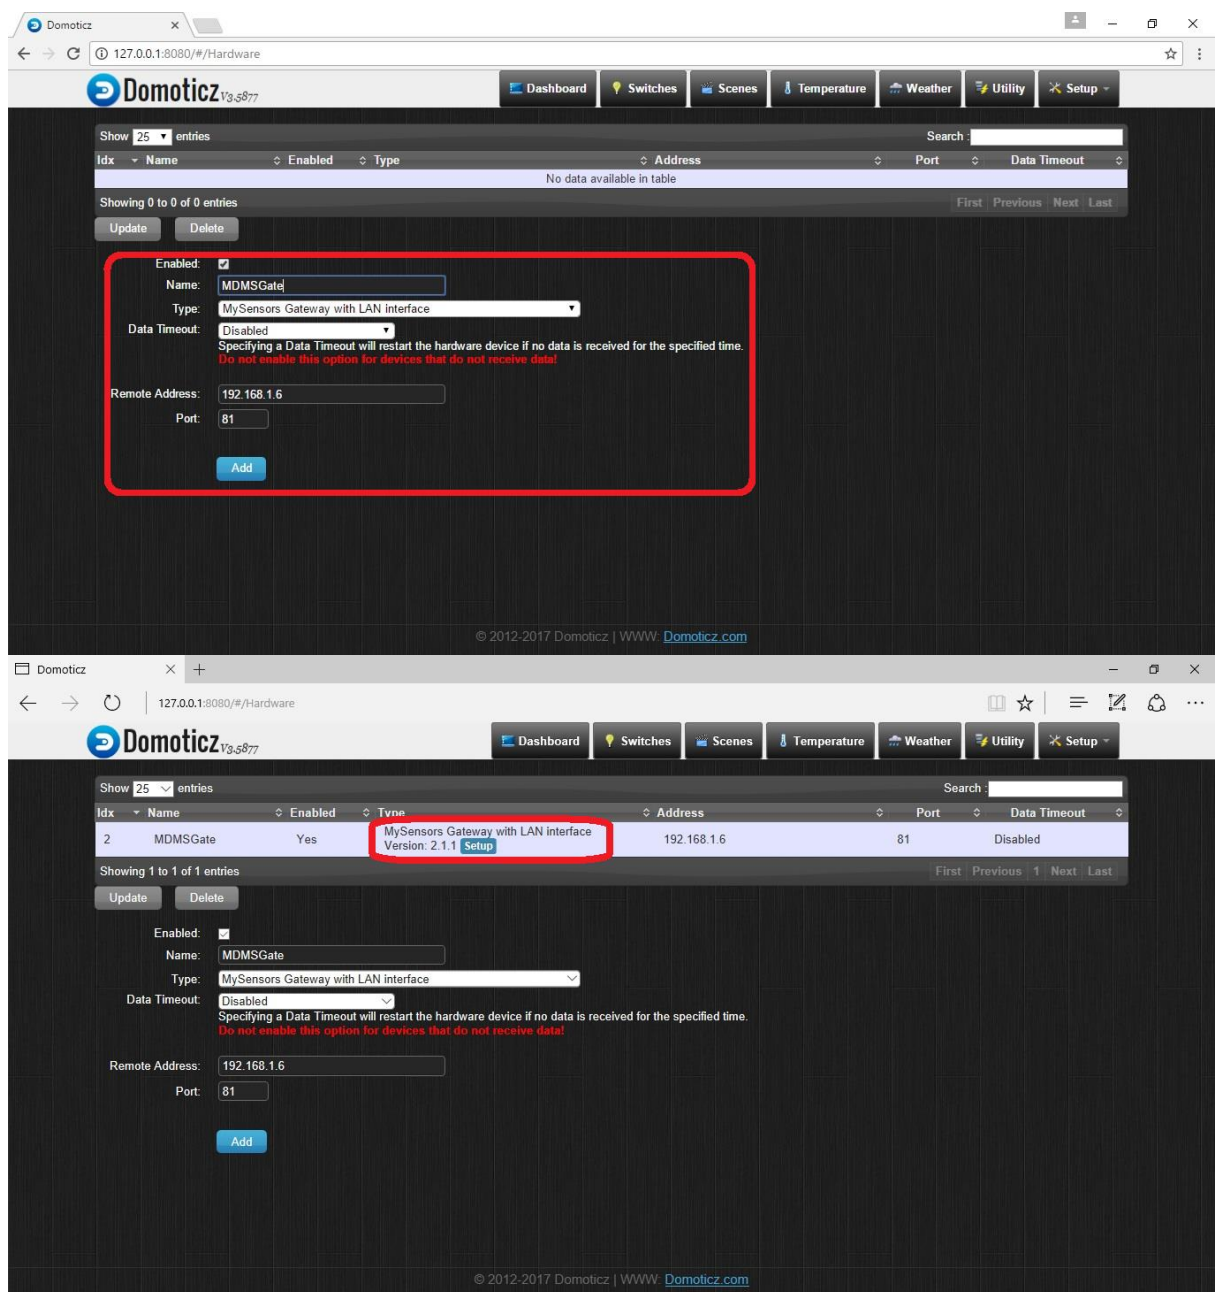

10. If you don't see the gateway, you should restart Domoticz software or computer.
11. Connect your "MDMSNode Lighting" to the AC line and lamp.
12. Click on "Setup" (see last picture in step 9), you have to see:

Device: MDMSGate

Nodes

Show 25 entries

NodeID	Name	Class Name	Value	Children	Last Seen
5	Unknown	Lighting	1.1	4	2017-06-14 17:35:54

Showing 1 to 1 of 1 entries

Update Delete Refresh

Children

Show 25 entries

ChildID	Type	Name	Values	Ack	Ack Timeout	Last Seen
No data available in table						

Showing 0 to 0 of 0 entries

Update Delete Refresh

© 2012-2017 Domoticz | WWW: Domoticz.com

13. Go to "Setup" -> "Devices" and press green button...

Used All Devices Not Used

Show 25 entries


Idx	Hardware	ID	Unit	Name	Type	SubType	Data	Last Seen
1	MDMSGate	0000005	1	Light relay	Lighting 2	AC	Off	2017-06-14 17:35:54

Showing 1 to 1 of 1 entries

First Previous 1 Next Last

© 2012-2017 Domoticz | WWW: Domoticz.com

14. Press "Add device"

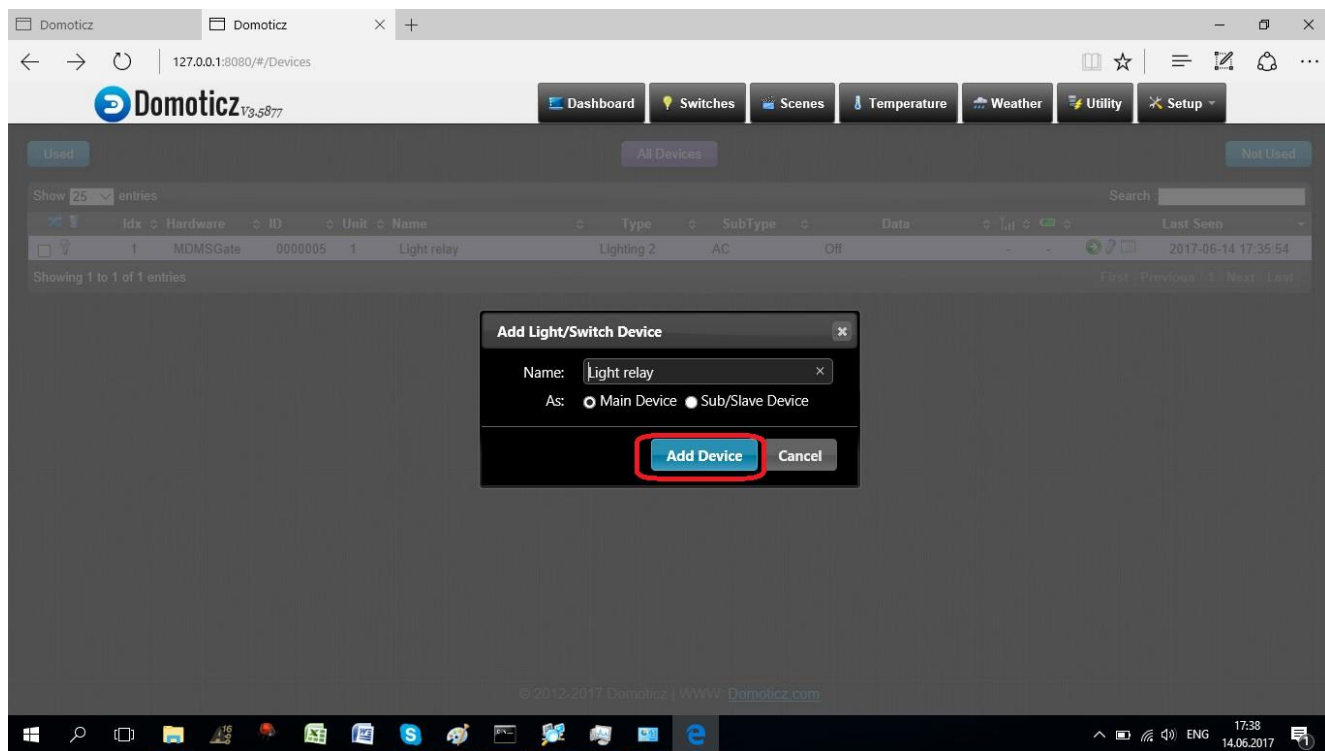

15. Go to “Switches” and click on Lamp picture and lamp state must change. If it’s that - my congratulations))

